


- 1 mic**
for switching the microphone on/off.
Button is illuminated red when active.
- 2 mute**
to mute the microphone.
As long as the button is pressed, the microphone is muted (mic button and ring-shaped indicator will switch off).
The selected channel remains occupied.
LCD indication (above selected channel): MUTE
Button is illuminated yellow when occupied.
- 3 original**
for monitoring the original signal (Floor),
Button is illuminated yellow when active.
- 4 treble**
for adjusting the headphone treble level.
- 5 bass**
for adjusting the headphone bass level.
- 6 guard**
red LED to indicate excessive headphone sound level.
- 7 volume**
for adjusting the headphone volume level.
- 8 program**
Endless rotary knob
-to alter channel assignment of the relay push buttons R1... R5 (see 14).
-to select monitoring channel for the loudspeaker, with display indication.
- 9 LS volume**
for volume adjustment of the built-in monitoring loudspeaker.
- 10 LS**
Select a language channel with the rotary knob "program" while pushing the button.
Button is illuminated yellow when loudspeaker is active.
- 11 Built-in loudspeaker**
for monitoring a selectable language channel.
Loudspeaker is always on. To switch off, turn the rotary knob "LS volume" to minimum Position (-).
Loudspeaker is automatically muted when a microphone in the booth becomes live.
- 12 Display**
to show all necessary information.
Backlit, 2x56 character
- 13 A, B, C**
to select outgoing channel.
Button is illuminated yellow when active.
- 14 R1 R5**
for selection of a relay channel.
The assignment of the buttons R1... R5 can be changed with the rotary knob "program" while pressing the corresponding relay channel button.
Display indication for selected channel.
Button is illuminated yellow when active.
- 15 Mini jack connector 3.5 mm**
for headphone connection (alternatively to 16).
- 16 Jack connector 6.3 mm**
for headphone connection (alternatively to 15).
- 17 DIN connector socket, 8pole**
for headset connection.

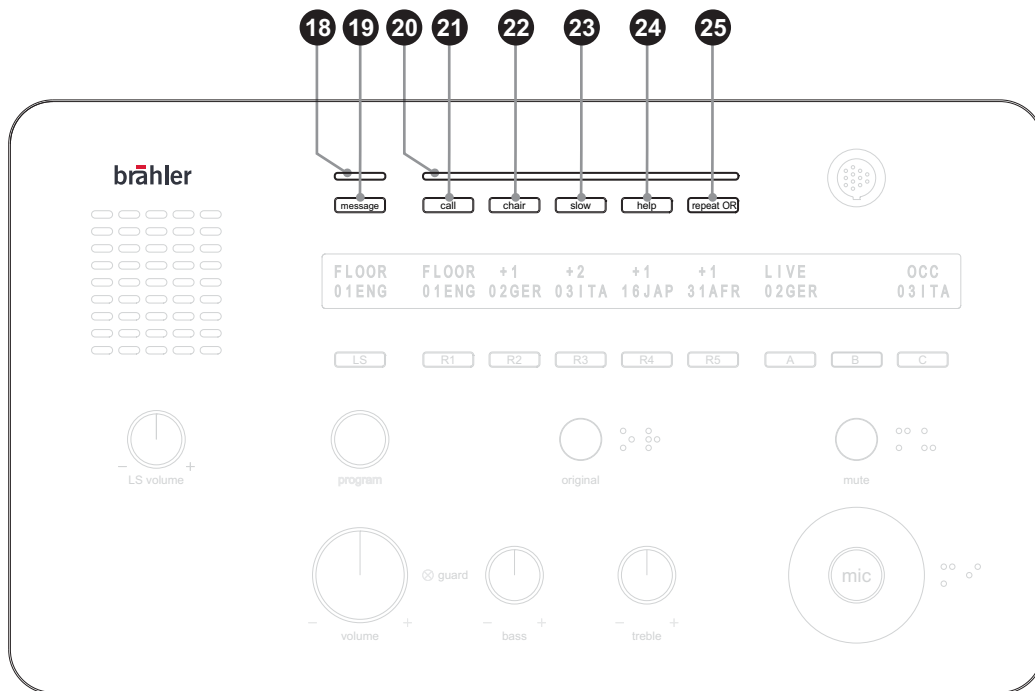

- 18 indicator light**
flashes in the case of an incoming message.
- 19 message**
Push the button to show messages for the interpreter on the display.
With green indication light above the button.
- 20 indicator light strip**
with integrated indicator lights for the corresponding buttons.
- 21 call**
to call the technician/operator.
With green indication light above the button.
LCD indication: CALL -> OPERATOR
- 22 chair**
to call the chairperson.
With green indication light above the button.
LCD indication: CALL -> CHAIRPERSON
- 23 slow**
to activate an external indication (e.g. on the speakers desk)
to ask the delegate to speak slower.
With green indication light above the button.
- 24 help**
to activate an external indication (e.g. on the operators desk) to ask
for assistance.
With green indication light above the button.
- 25 repeat OR**
to repeat the last 5 seconds of the floor/original channel.
With green indication light above the button.